


Ident – Nummern – Konstante 3740


Gebrauchsanweisung 52 4914 (D,GB,F,NL,N,S,SF, RUS,PL)

Montageanweisung 52 0065 (D,GB,F,I,NL,P,DK,N,S SF,E,GR)

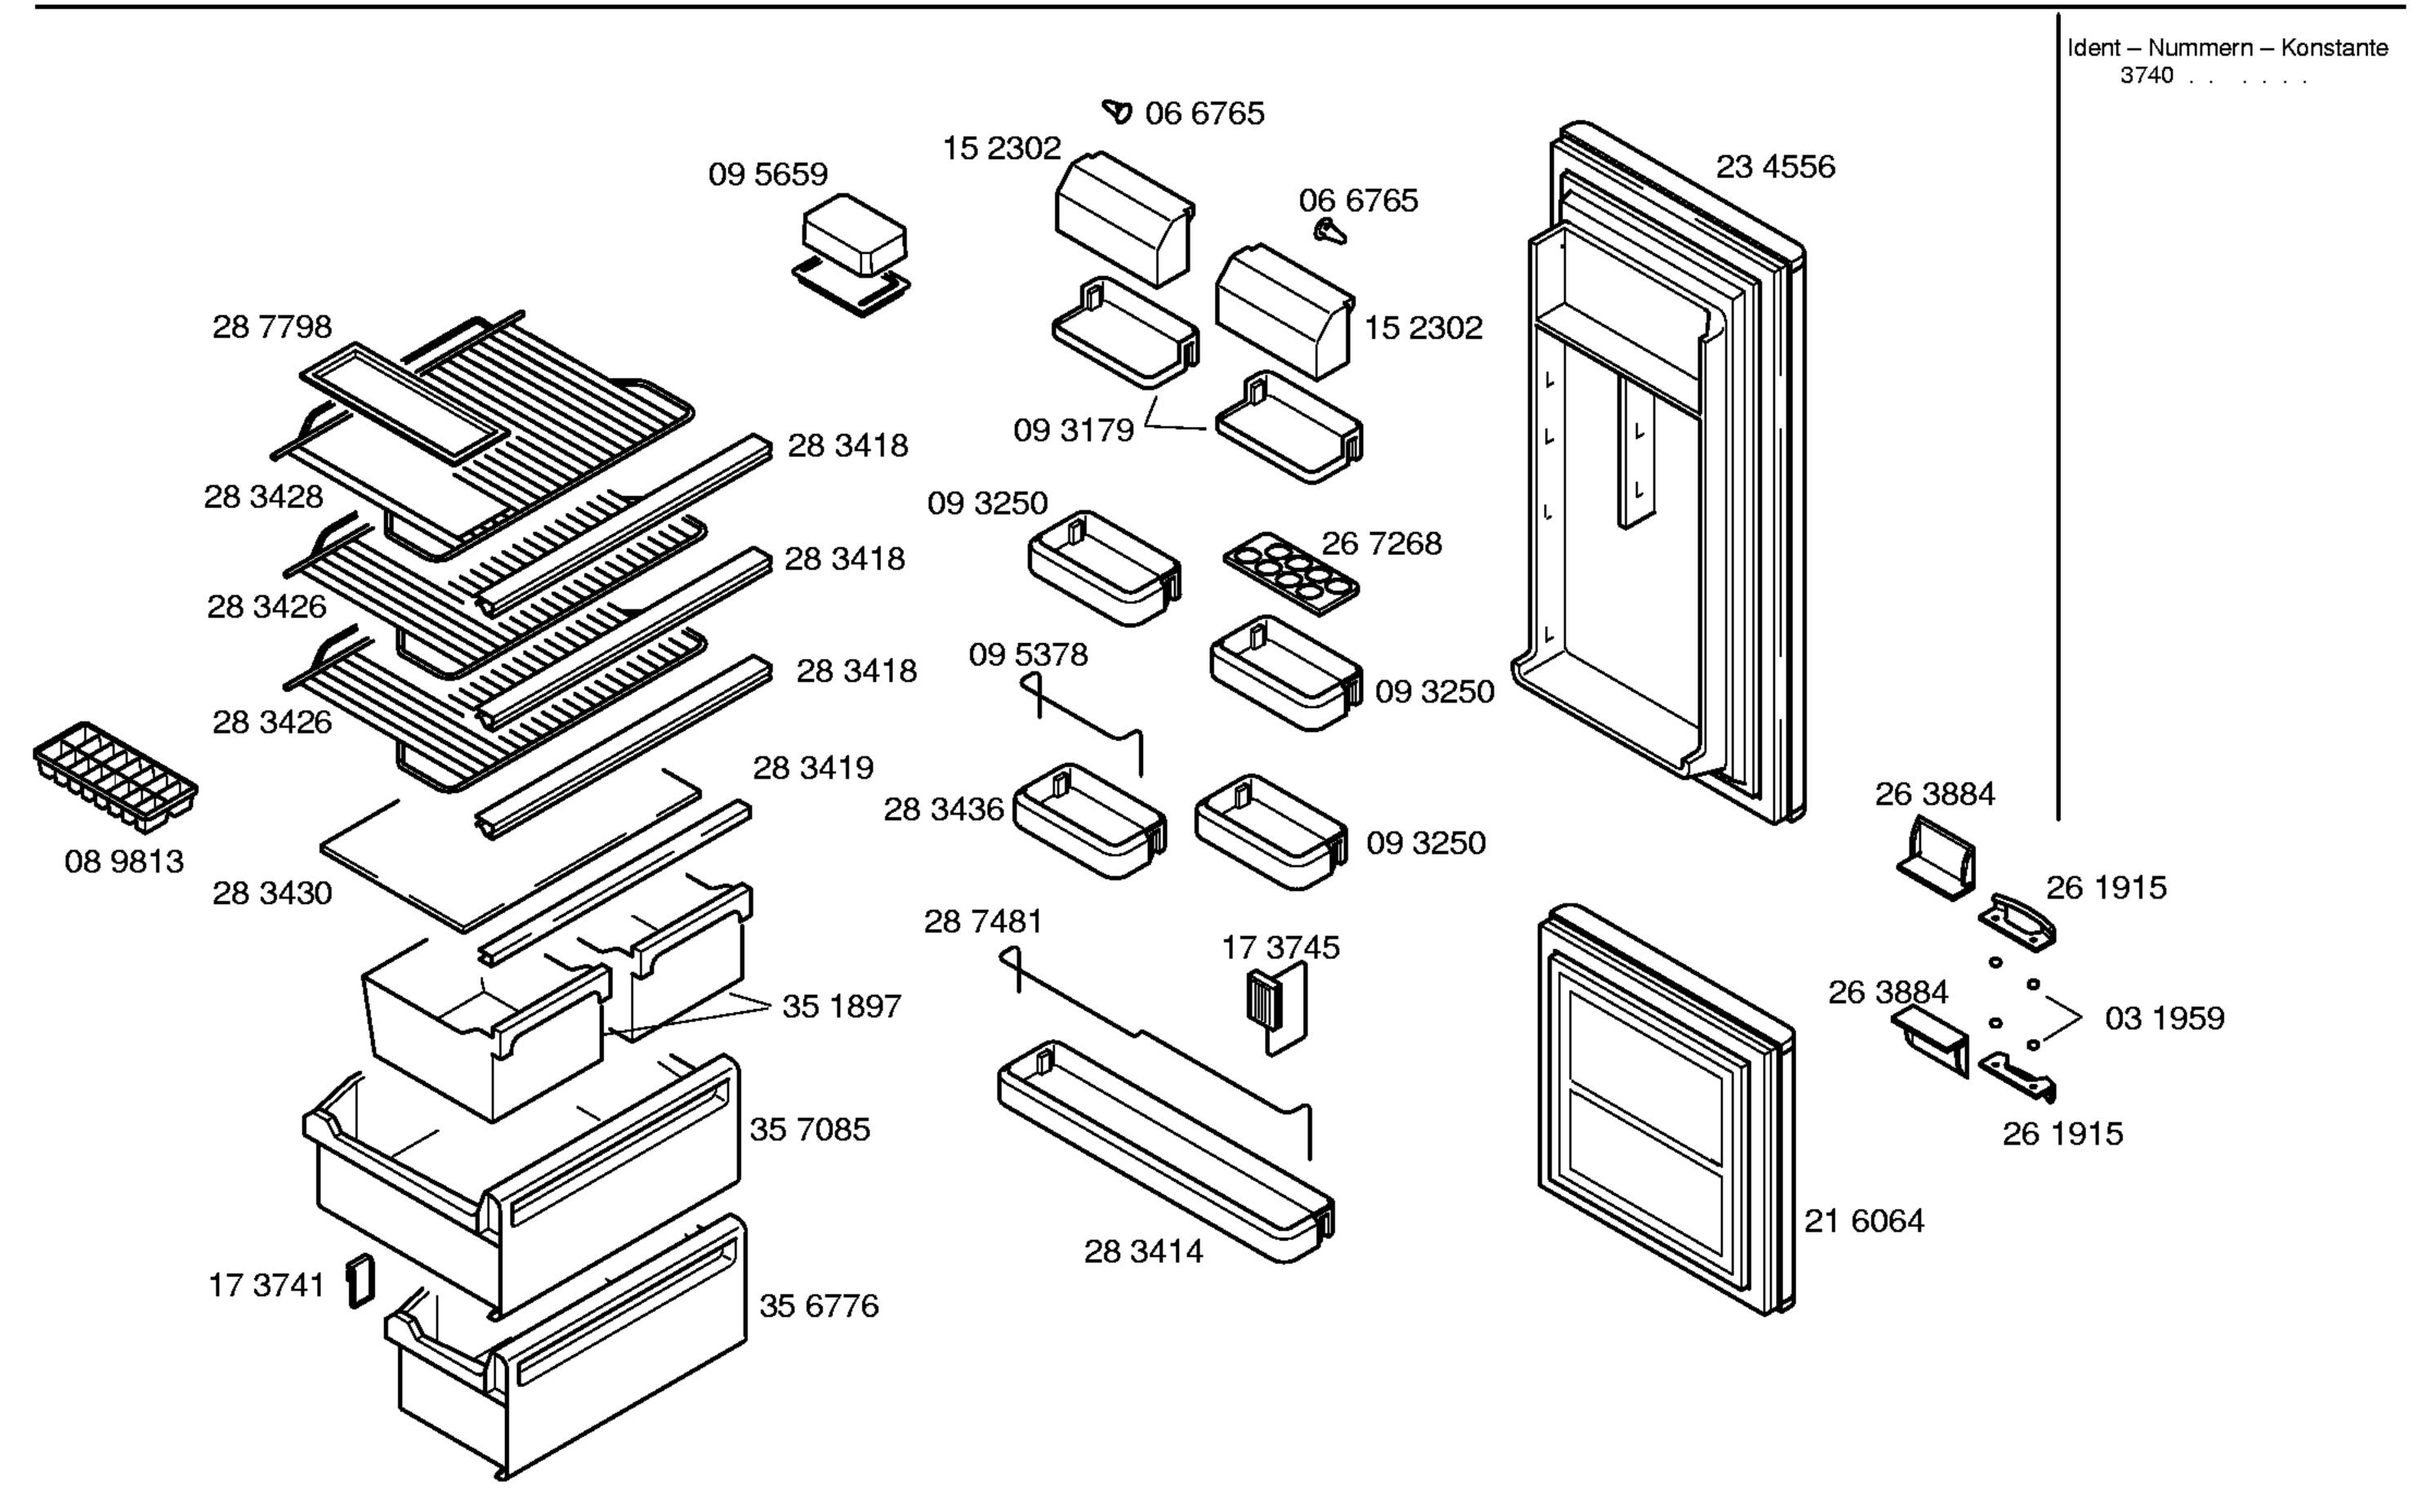





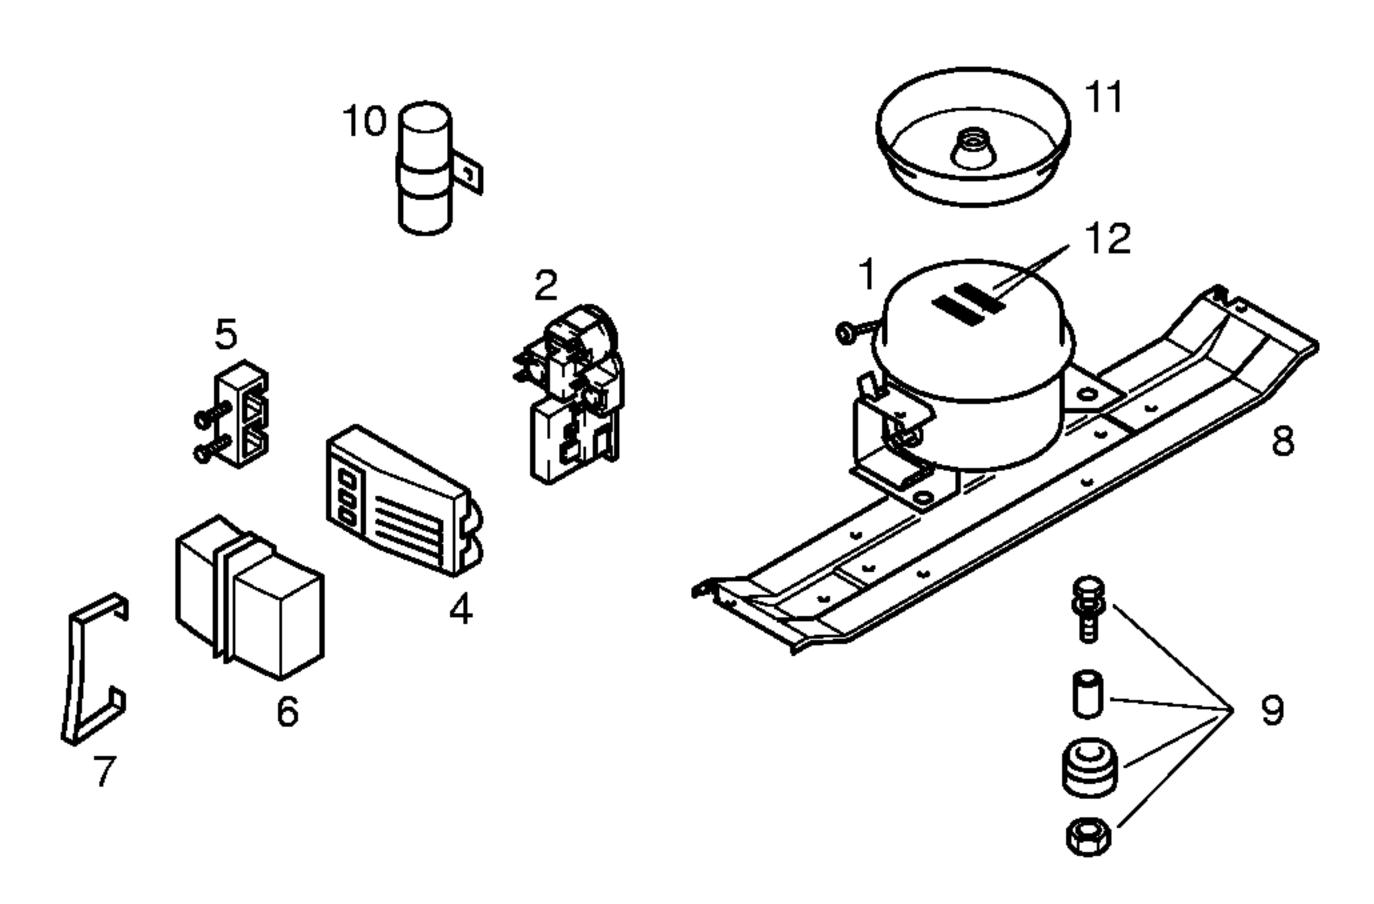

	KÜHLGERATE
Pos:	MATSUSHITA
	DA 110 E
1	14 1797
2	06 6875
3	
4	
5	
6	
7	
8	28 8253
9	05 0166
10	
11	09 3771
12	
13	

Ident – Nummern – Konstante
3740

TECHNISCHE DATEN/TECHNICAL DATA/DONNEES TECHNICUES/DATOS TECNICOS				
Verdichter/Compressor/Compresseur/Compresor Typ/Type/Tipo Förderleistung/Delivery/Debit/Aspiración I/h	Matsushita DA 110 E			
Anlaufstromm/Starting current/Cour.démarrage/Int.arranque A	8,70			
Widerstand/Resistance/Resistencia. Ha/main/prin. Ohm Hi/aux.	12,41 29,20			
Til/aux.	29,20			
Temp.Reyler/Thermostat/Termostato	возсн			
Typ/Type/Tipo	Electronische			
Reglerstellung/Position/Conexión	MIN. MAX			
Schaltwerte/Switching values/ein/conex.ºC	+8°C -1,5°C			
Valeurs de commutation/Desconexaus"/descon.	+6,5°C -3°C			
(abtaven' od)alarm'				
Verdampfersensor/Evaporator sensor/Sonda evaporador				
Schaltwerte/Switching values/ein/conex.ºC	+5°C +5°C			
Valeurs de commutation/Desconexaus"/descon.				
Fülmenge/Fill. quantily/Charge/Carga R600a g	*			
Anschlusswert/Comm. load/Puiss. Connect./Potenc. W	123			
Heizung/Heater/Chauflage/Resistenc.descong.				
Widerstand/Resistance/Resistencia Ohm				
Leistung/Power/Puissance/Potencia W				
Ventilador/Blower/Ventilateur/Ventilador				
Widerstand/Resistance/Resistencia Ohm				
Magnetventil/Magnetic valve/Electrovanne/Electrovalvula				
Widerstand/Resistance/Resistencia Ohm				
Spannung/Voltage/Tension/Tensión V				
Temp.Reyler/Thermostat/Termostato ambiente para				
ventilador refrigerador				

^{*} Siehe Typenschild/Ver plaqueta de características